

Instruction for pairing the RF remote control

Step 1: Open the receiver box and press the "SW5", you would see the green led light start to flash.

Step 2: While the green led light start to flash, (within 3 seconds) press remote the UP and STOP button together. Keep pressing both button until you see the green led light stop, then the green light off and come back again shortly, which means the pair work is finished.

Step 3: Press every buttons on the remote to test if it works, if it doesn't, please try the step 4 which is for clearing the memory and redo the upper step again.

Step 4 (Clear the memory): Keep pressing/holding on the SW5 until the green led light flashing fast, then loose the button and press again quickly, you would see the led light stop which means the memory is cleared.