 
 
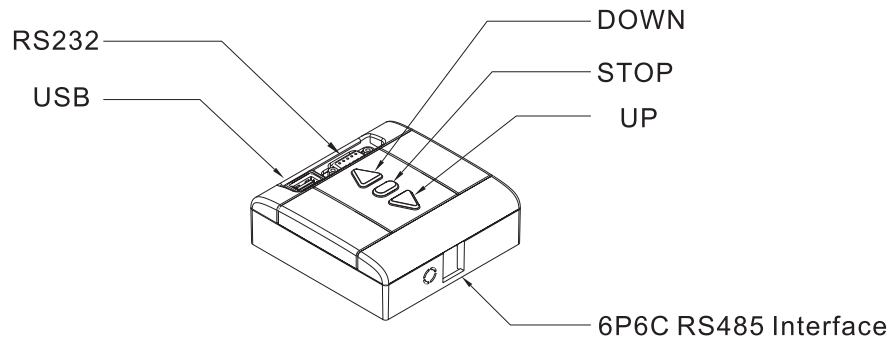 



1 INTERFACE

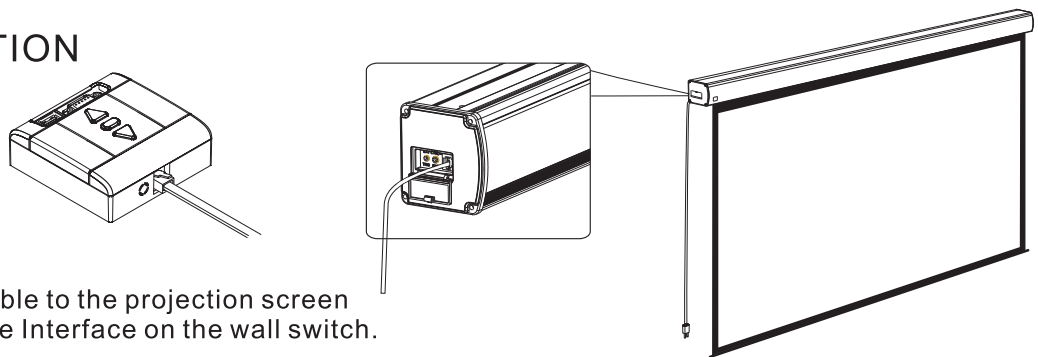

2 CONNECTION

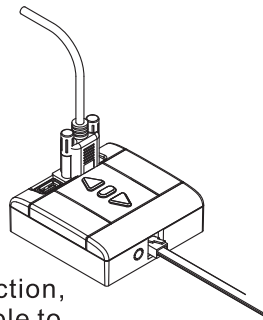

 While using the RS232 connection, please connect the RS232 cable to the interface on the wall switch and the other end to computer or central control system.

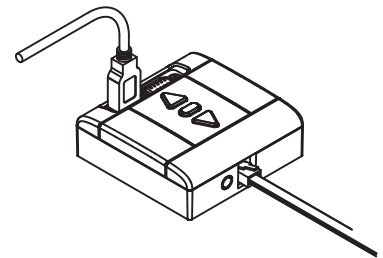

While using the USB connection, please connect the USB wire to the interface on the wall switch and the other end to computer or central control system

3 CONFIGURATION

1. PROTOCOLS

Data Digits: 8 Digits
Initiate Digits: 1Digit
Terminate Digits: 1 Digit
BAUD Rate: 2400

2. CONTROL CODES

UP : 0xFF 0xEE 0xEE 0xEE 0xDD
STOP: 0xFF 0xEE 0xEE 0xEE 0xCC
DOWN: 0xFF 0xEE 0xEE 0xEE 0xEE

